

FEATURES COMPARISON

	VISTA-10P	VISTA-15P	VISTA-20P	VIA-30PSE
SYSTEM CAPACITY				
Maximum Zone Capacity	22	32	48	32
Std. Hardwired Zones (with zone doubling)	6 (~)	6 (~)	8 (15)	2 (~)
Maximum Hardwired Expansion	0	22	40	8
Maximum Wireless Expansion	16	26	40	30
Independent Keyfob Zones (do not use zones)	8	8	16	0
Partitions	1	1	2 "true"	1
User Codes	16	32	48	7
Event Log	32	50	100	0
Max. Expansion of 2-Wire Smokes	0	16	16	0
Maximum Number of Schedules	2	16	32	0
FALSE ALARM PREVENTION FEATURES				
Exit Error Logic	✓	✓	✓	✓
Exit Delay Reset	✓	✓	✓	✓
Exit Delay Countdown	✓	✓	✓	~
Cross Zoning	✓	✓	✓	~
Alarm Verification - Fire	✓	✓	✓	~
Swinger Shutdown	✓	✓	✓	✓
Unvacated Auto-Stay	✓	✓	✓	~
Alarm Cancel Verification	✓	✓	✓	~
SYSTEM CONFIGURATION				
Interactive Phone Support	✓	✓	✓	✓
Real Time Clock	✓	✓	✓	~
Temporal Bell	✓	✓	✓	✓
Bell Supervision	✓	✓	✓	✓
Telephone Line Monitor	~	✓	✓	~
On-Board Triggers	2	2	2	0
Relays Supported	8	8	16	4
X-10 Devices Supported	~	8	16	0
ADDITIONAL FEATURES				
Master Console	N/A	N/A	~	N/A
Cross Partitioning (<i>goto</i>)	~	~	✓	~
"Night" Arming	✓	✓	✓	~
RF Supervision by Transmitter	✓	✓	✓	✓
Common Lobby Logic	N/A	N/A	✓	N/A
Configurable Zone Type	✓	✓	✓	~
"Battery Saver"	~	✓	✓	~
Keyswitch Arming	✓	✓	✓	~
Access Schedules	✓	✓	✓	~
Output Device Schedules	✓	✓	✓	~
CONVENIENCE FEATURES				
Single Button Arming	✓	✓	✓	~
Quick Exit	✓	✓	✓	✓
Keypad Macros	✓	✓	✓	~
Viewable Event Log at Keypad	✓	✓	✓	~
Time & Date Display	✓	✓	✓	~
Pager Capability	2	2	4	1
Auto Arm/Disarm	✓	✓	✓	~
Graphic Keypad Support	~	2	4	~
Internet / GSM Upload/Download Support	✓	✓	✓	~

✓ Supported Feature

~ Not Supported

N/A Not Applicable

GLOSSARY

SYSTEM CAPACITY

- **Max. Zone Capacity** - the maximum number of total zones (standard zones + wireless expansion zones + hardwired expansion zones) that can be supported by the panel.
- **Std. Hardwired Zones** - the number of hardwired zones that the panel supports before expansion.
- **Max. Hardwired Expansion** - the maximum number of zones that can be added via a hardwired expansion module 4219, 4229, or polling loop.
- **Max. Wireless Expansion** - the maximum number of zones that can be added via a wireless receiver (5881ENL, ENM, ENH) or RF keypad (6150RF, 6128RF)
- **Wireless Keys (do not use zones)** - the maximum number of fully programmed 4-button keys that can be enrolled in the panel without taking away from maximum zone capacity.
- **Partitions** - the number of areas that can be controlled separately as if each area had its own control panel.
- **User Codes** - the total number of unique codes used to operate the system.
- **Event Log** - the number of events (openings, closings, alarms, etc) that the panel records.
- **Max. Expansion of 2-Wire Smokes** - the maximum number of 2-wire smokes that can be supported.
- **Max. Number of Schedules** - the maximum number of scheduled events that can be programmed into the system (openings, closings, etc).

FALSE ALARM PREVENTION FEATURES

- **Exit Error Logic** - alerts the user and allows for correction in the event an exit door is left open while keeping the remaining protection points armed; a unique report is sent to the central station.
- **Exit Delay Reset** - allows for user re-entry without causing an alarm.
- **Exit Delay Countdown** - allows the user to see the exit delay countdown at the keypad.
- **Cross Zoning** - requires a combination of zones to fault before an alarm sounds.
- **Alarm Verification - Fire** - will double-check an alarm condition before sounding.
- **Swinger Shutdown** - the number of times per armed period a panel will call the central station when multiple alarms occur.
- **Unvacated Auto-Stay** - an option that will cause the panel to arm STAY if the user has armed the panel in AWAY mode, but does not trip an entry/exit zone.
- **Alarm Cancel Verification** - a distinct keypad message received after an alarm report has been successfully cancelled.

SYSTEM CONFIGURATION

- **Interactive Phone Support** - permits access to and control of the security system from any touch-tone telephone.
- **Real Time Clock** - an internal clock used to "stamp" events when they occur. (See Event Log)
- **Temporal Bell** - the ability to sound a pulsing fire alarm in compliance with code (three pulses and a pause, repeated).

- **Bell Supervision** - the ability to monitor the status of all audible warning devices and report a TROUBLE condition via the keypad and/or central station.
- **Telephone Line Monitor** - a message sent to the keypad in the event of a phone line fault. May be used to send a report to the central station via secondary method.
- **On-Board Triggers** - programmable voltage level outputs which can be used to initiate external devices (i.e. radio transmitter, strobe light, etc.).
- **Relays Supported** - the number of 4204 or 4229 relays that can be used to activate other equipment and devices.
- **X-10 Devices Supported** - the number of X-10 compatible devices that can be controlled via an X-10 transformer (4300).

ADDITIONAL FEATURES

- **Master Console** - the ability to have one keypad monitor and operate all partitions.
- **Cross Partitioning (goto)** - the ability to control any partition in a multi-partition system from any keypad.
- **"Night" Arming** - an additional arming state that allows certain specified interior zones to act as if the panel were armed in AWAY mode.
- **RF Supervision by Transmitter** - the panel checks the status and presence of all supervised wireless devices.
- **Common Lobby Logic** - logic that allows a common area to be shared by multiple partitions.
- **Configurable Zone Type** - allows the installer to create a custom zone type and assign all zone attributes.
- **"Battery Saver"** - during AC power fail this function will disconnect the battery to prevent irreversible system battery failure.
- **Keyswitch Arming** - supports the use of a keyswitch on either partition utilizing a hardwire zone.
- **Access Schedules** - allows users access during a pre-defined time period.
- **"Output Device Schedules** - allows output devices (relays/X-10) to activate at pre-defined times.

CONVENIENCE FEATURES

- **Single Button Arming** - an option that allows the panel to be armed by depressing a single key on the keypad.
- **Quick Exit** - an option that will allow a user to exit the premises without disarming the panel by initiating exit delay while the panel is armed in STAY mode.
- **Keypad Macros** - allows simplified keypad commands to control complex events.
- **Viewable Event Log at Keypad** - allows events stored in the panel to be viewed at the keypad.
- **Time and Date Display** - allows the time and date to be displayed directly on the keypad.
- **Pager Capability** - The ability to send reports to pager number(s) in addition to central station phone numbers.
- **Auto Arm/Disarm** - allows the panel to arm or disarm itself via a programmed schedule.
- **Internet Support** - allows uploading/downloading and alarm reporting via the internet.